



 

 
Using Wonderbook

Press  to turn on or off.


Press  to start at the beginning of the book.



Adjust volume on the side.

Enjoy out loud or plug in headphones.


Slide between   and  to experience Wonderbook in two different ways.


Read Along Mode

Use  to start and stop the audiobook.


Press  to move forward a track or press  to go back.

Learning Mode

Use  to move to the next question.

 Solid green light = charged and ready to play

 Flashing green light = in pause mode

 Flashing red light = low battery

Device will power off after five minutes of inactivity.

Not turning on? Use a micro USB cord to charge or return your Wonderbook to your local library.