


Wolverine 8mm and Super 8 Film Digitizer Instructions

We highly recommend watching the YouTube video below if you are brand new to using the machine. The official user manual will also be included on the Memory Card for further troubleshooting.

https://www.youtube.com/watch?v=eb5Ve_SYNoA


Overview: The Wolverine 8mm and Super 8 Film Digitizer is a reel-to-reel digitizer, meaning that you will need to feed film from one reel to the other. As this happens, the machine will digitize the film, frame by frame, onto an SD card. That SD card can then be viewed by the Memory Card laptop or your own device. It is recommended that you provide your own SD card for this process so that you can leave with your original digitized media.

Super 8 versus 8 mm

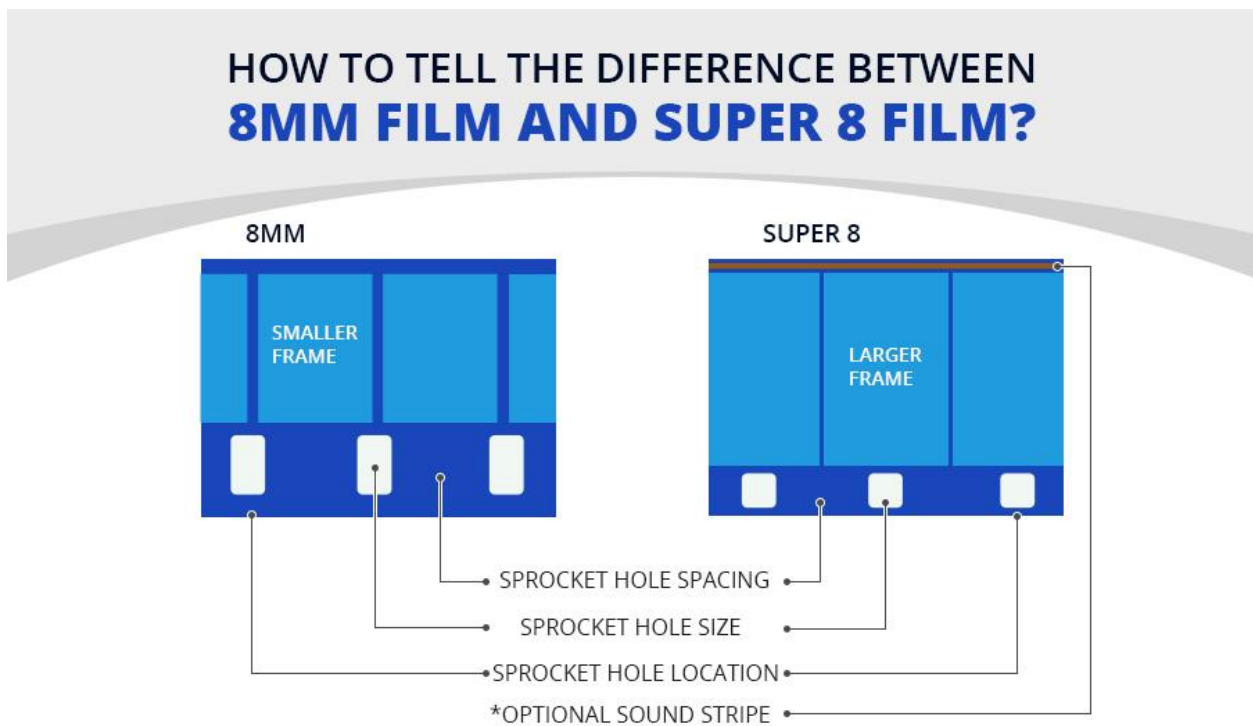

Quick Start Guide

- Plug in power cord and insert the SD card. Both ports are on the back of the unit. The SD card cannot be over 32gb in size, or it will not save media.
- When recording, the reel on the left is for your media. The machine can only handle 8mm or Super 8 film.
 - o There is a red clip that should be placed in the center of the reel on the left so the media fits snug. There are other adapters to make sure reels fit securely.
- Once the media is attached to the reel on the left, start feeding the film following the **solid** lines on the front of the machine.

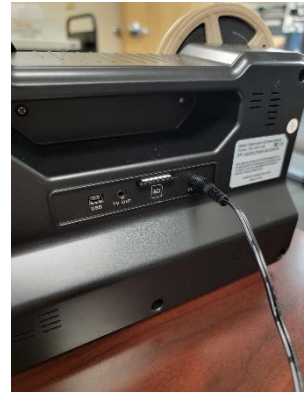

- When running film through the center panel over the lens you will see three white tabs. The film needs to go **under** these tabs to stay in place.
- Go slow when affixing film on the right-side reel, or feed reel, as it needs to be able to hold once the reel starts winding. It may take a few tries. Be patient.





- When the media is set up securely, power on the machine using the front power button.
- Close the film panel to cover and secure the film.
- Use the switch at the bottom of the unit to select 8mm or Super 8. The machine will not work if this is chosen incorrectly.

Use the screen on the unit to preview the film. If the film is cut off or not fully in-frame adjust before recording. To do this, follow the path below:

- o Menu > FrameADJ > X, Y, W (use up+down arrows and Enter to adjust)
- Start recording. To do this:
 - o Menu > Use arrows to get to Record > Press Enter
 - You may need to press enter a second time to confirm 8mm or Super8
 - o Once recording, you will see a blinking red light on the screen and the film should slowly start to feed. You can view the film via the display screen as it is digitizing.
- You can record the full film reel or stop at any point by pressing Enter.
- It might be a good idea to test a short clip and preview on the SD card (see below) before doing a long project.
- Remove the SD card and insert it into the SD card adapter. Plug the adapter into a USB port on the Memory Cart laptop.
- From here you should save your files to your personal storage device.





- To return film to the original reel. Switch the reels and now wind the film following the **dotted** lines.
- When returning film, you do not need to close the center cover over top of the film or guide it through the white tabs. It will go much faster this way!

When you are finished, make sure to clean the center cover and lens of the machine with a lint free cloth. Return all equipment back to the cart.